



POTPRO™ 6" 1 GALLON - HOW TO GROW SERIES (STEP 10)

PROCESS

SHOT VOLUMES

1

Recommended shot volumes are 4-6%
***GMV x Shot % = Shot Volume**
 i.e., 3785ml x 5% = 190ml

*Growing Medium Volume

CALCULATE & REPLENISH

2

Dryback %
Shot Volume % = *RIC
 30 ÷ 5 = 6*

*Round to the nearest whole number


*Replenish Irrigation Cycles

DRYBACK

3

950 ml - 1330 ml (25-35%)

EXAMPLE 35% DRYBACK AND 5% IRRIGATION CYCLES

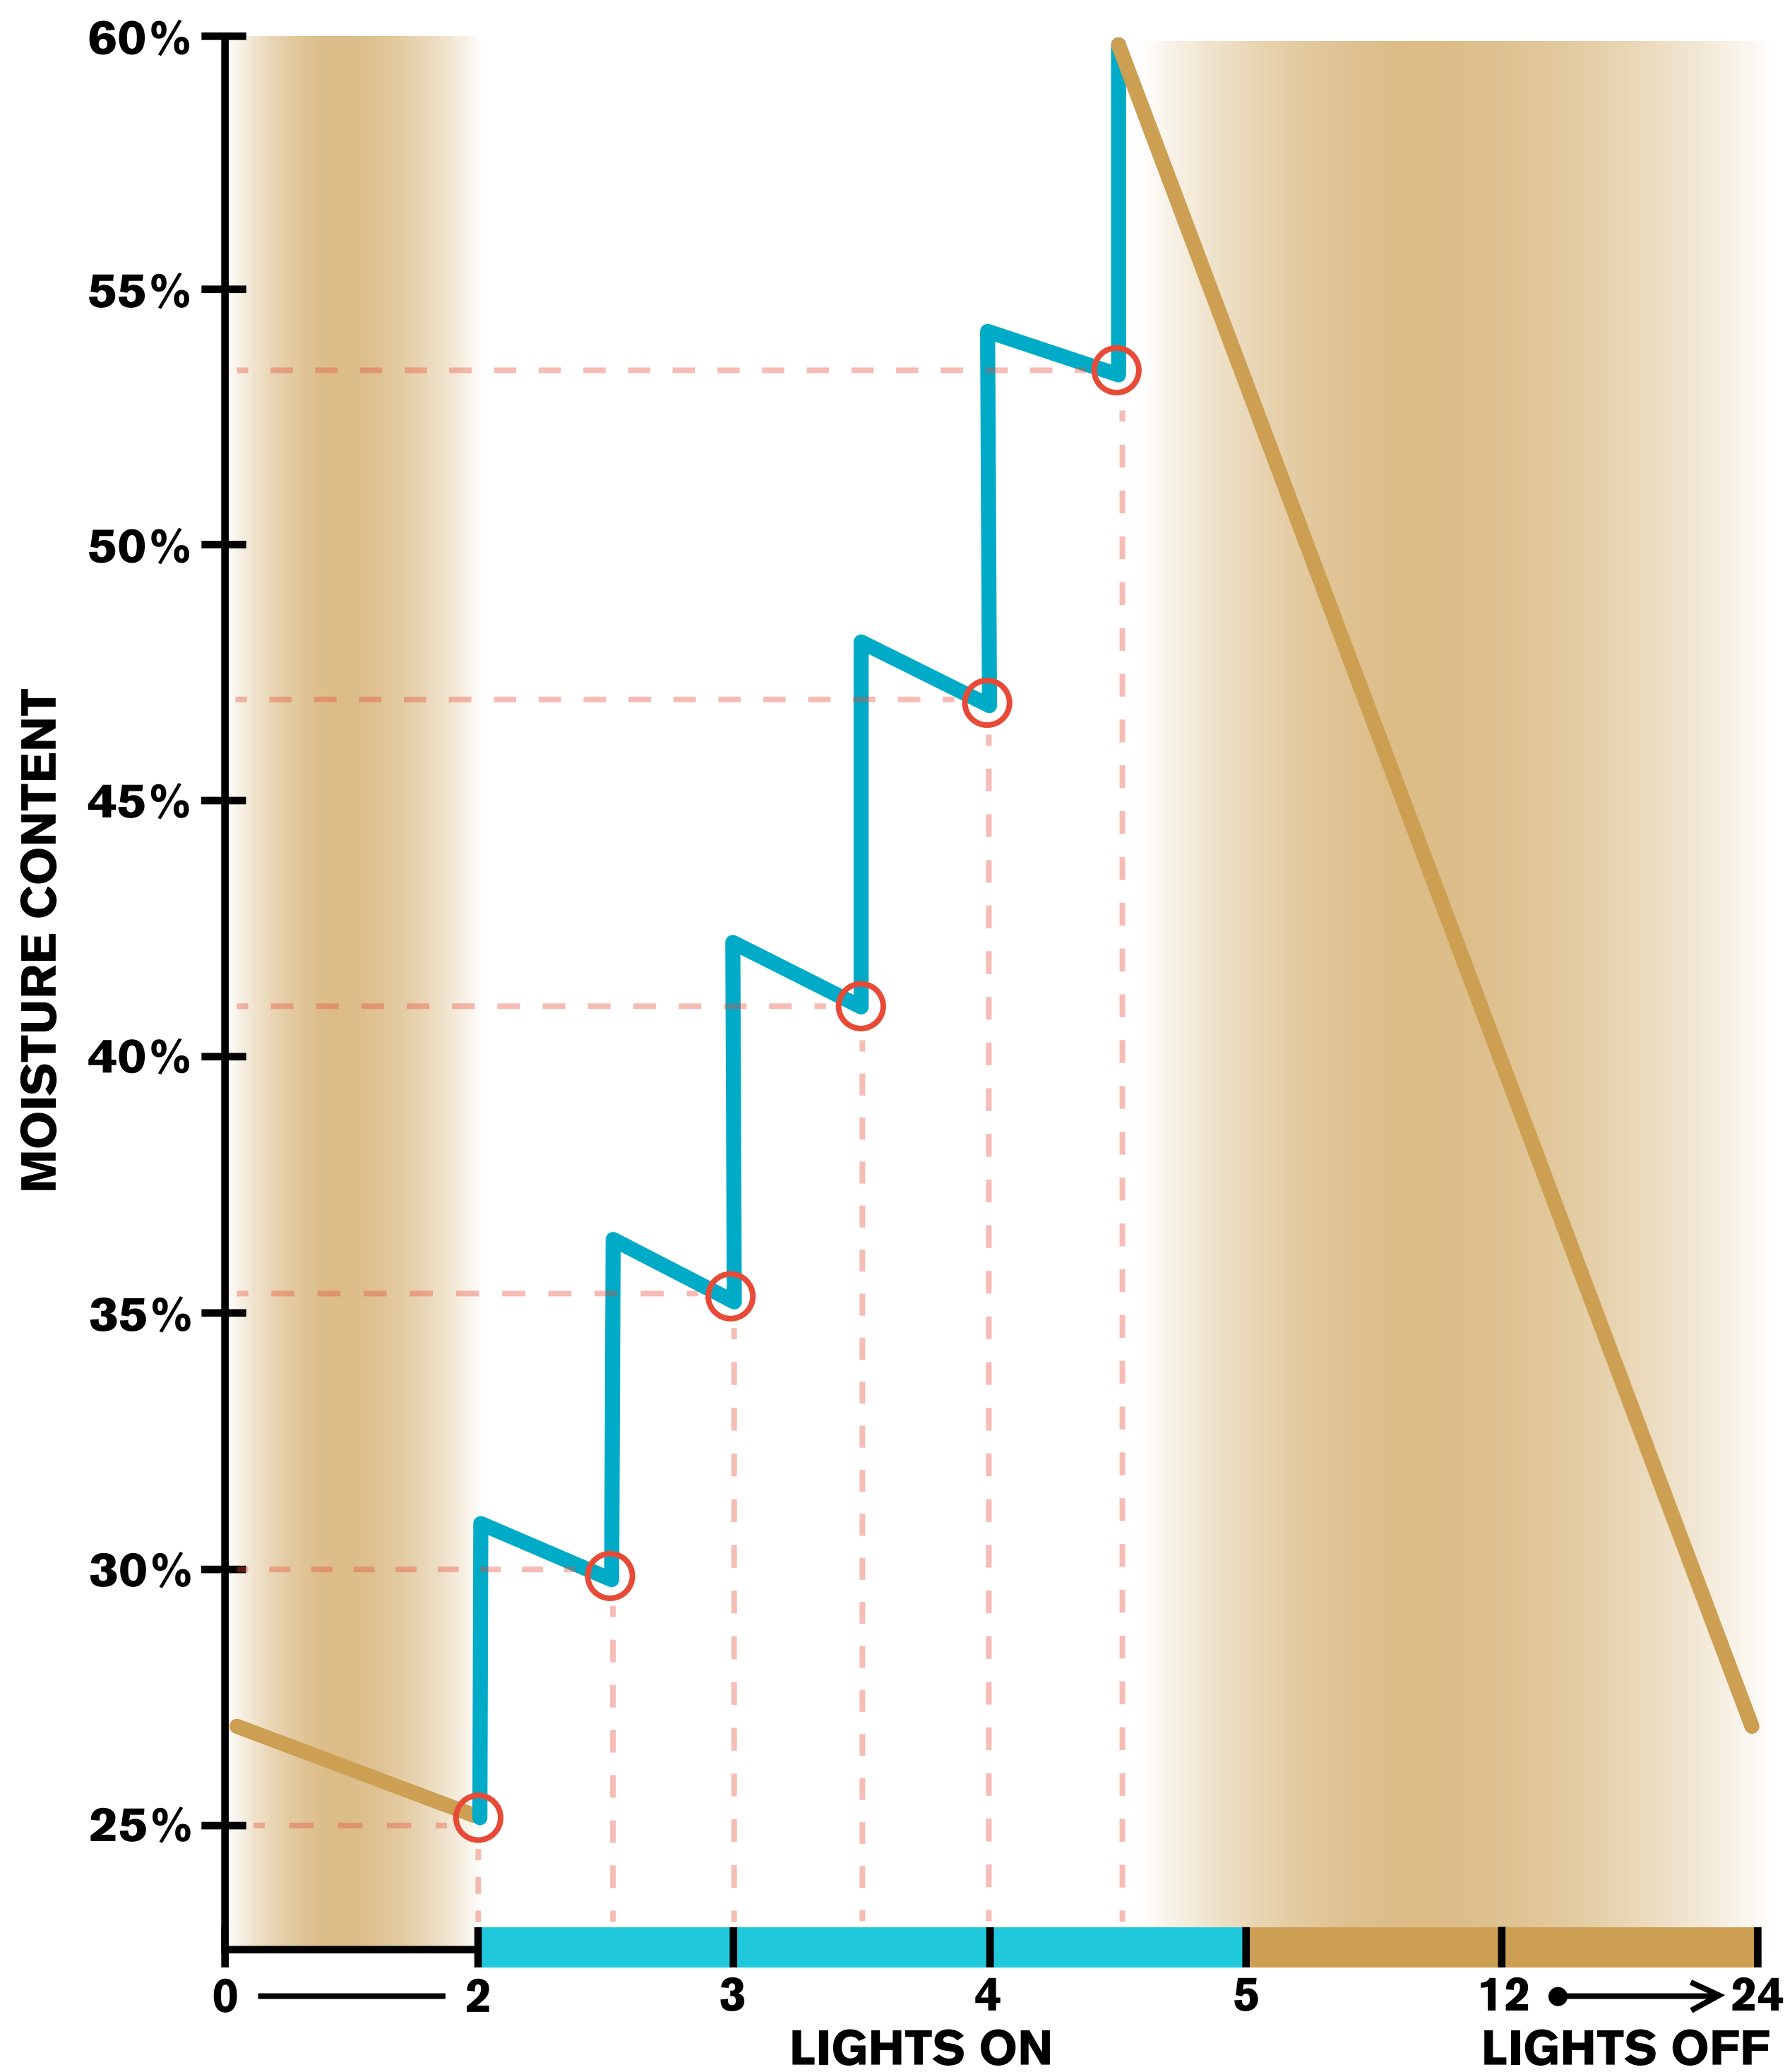

*We recommend lights be on for 12 hours.