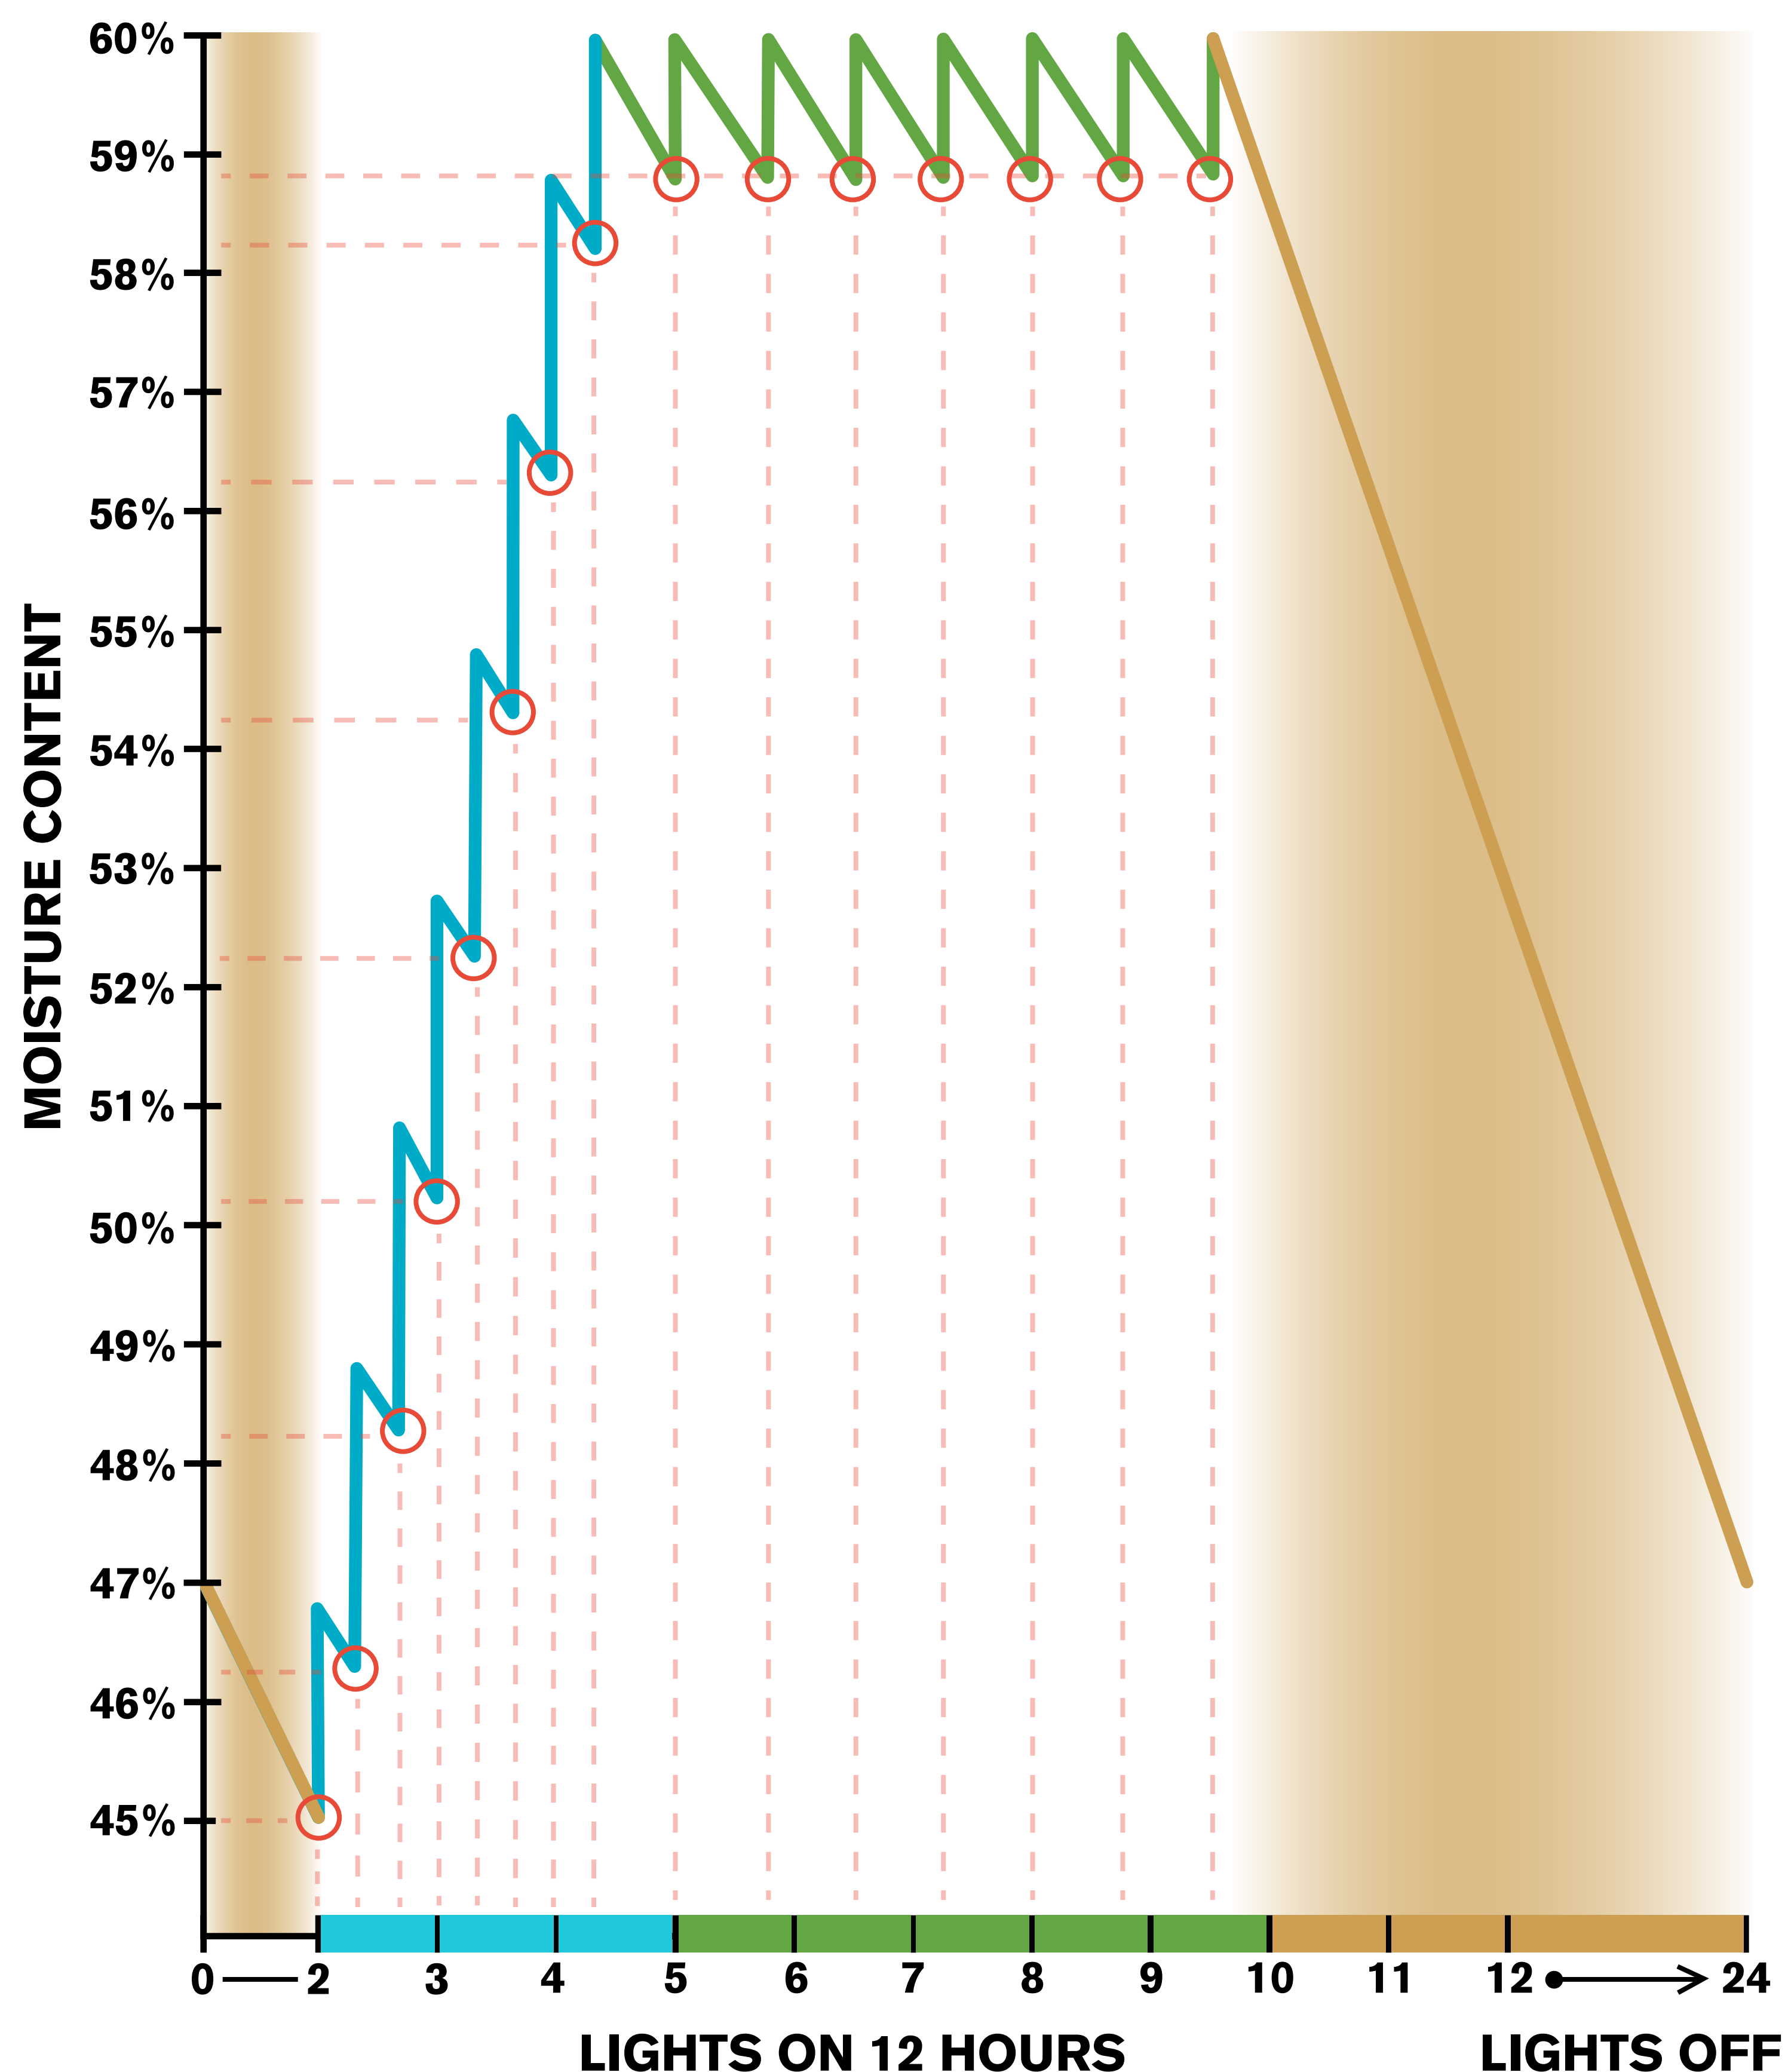

**POTPRO™ 6" 1 GALLON - HOW TO GROW SERIES (STEP 8)**
**EXAMPLE 15% DRYBACK AND 1.9% IRRIGATION CYCLES**

**PROCESS**
**SHOT VOLUMES**

1

Recommended shot volumes are 1-3%  
 $*GMV \times \text{Shot \%} = \text{Shot Volume}$   
 i.e.,  $3785\text{ml} \times 1.9\% = 70\text{ml}$

\*Growing Medium Volume

**CALCULATE & REPLENISH**

2

$\frac{\text{Dryback \%}}{\text{Shot Volume \%}} = *RIC$   
 $15 \div 1.9 = 7.8^*$

\*Round to the nearest whole number

\*Replenish Irrigation Cycles

**REFRESHMENT**

3

Recommended 1.5-3%  
 Use the refreshment period to control overnight drybacks. 1.9% irrigation cycles every 45 minutes after you have replenished the medium or the moisture content has dropped 1.9%.

**DRYBACK**

4

380 ml - 570 ml (10-15%)